

PROGRAMMING:

NOTE: Due to the short wash and rinse cycles, the programming of the unit may require several wash cycles.

Step 1: Apply power.

Step 2: Remove the cover and connect the Two Button Programmer as shown in Figure 3.

Step 3: Push either button on the programmer to toggle the LED to the desired program mode as shown in Figure 4. See below for the program mode.

Step 4: Push both buttons, simultaneously, to start programming the time or enter program mode.

Step 5: Push both buttons, simultaneously, to stop time or exit the program mode.

Step 6: Repeat steps 3-5 for each program mode.

Step 7: After the Olympian Unit has been programmed with the desired values, remove the Two Button Programmer from the Olympian programming jack and replace the Olympian cover.



Figure 3. Programmer Installation

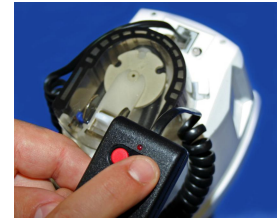


Figure 4. Program Mode Selection

Rinse Limit Indicator
 On = Limit is active
 Off = Limit is inactive

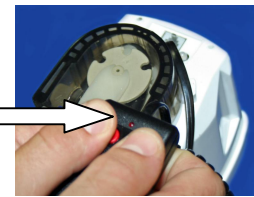


Figure 5. Programming Start / Stop

	Program Mode	LED Color	Description	Programming	Factory Default Settings
1	Delay	Yellow	Amount of time delay between power and pumping of rinse additive	Push both buttons to start delay time and both buttons to stop delay time	0 Seconds
2	Pump Speed	Green	Speed of pump	Push both buttons to enter programming mode. Push left button to reduce speed. Push right button to increase speed	100% (Maximum speed)
3	Rinse Limit	Red	Active = Pump will stop running after 18 seconds of power. Inactive = Pump will run until power is turned off.	Push both buttons to toggle the LED on the programmer. On = Activates rinse limit Off = Pump runs until power is turned off	Active