


Menu MAIN

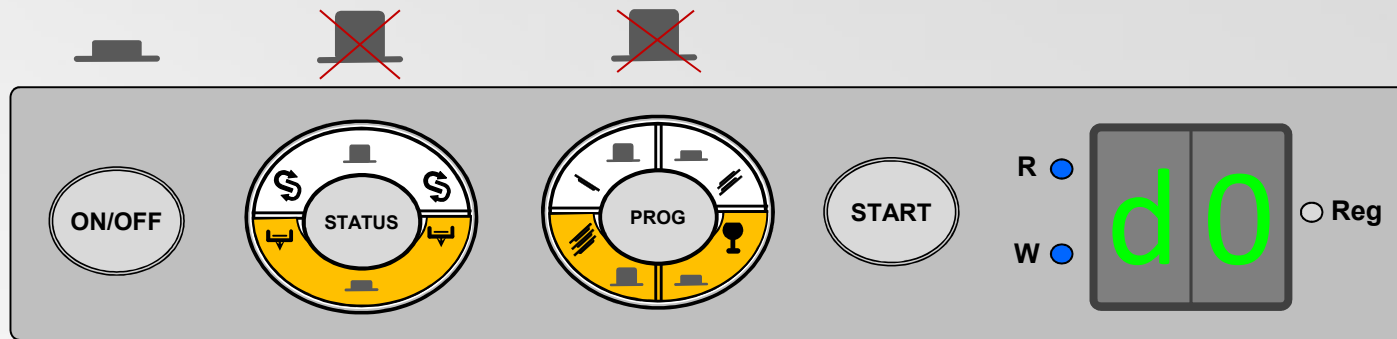

To enter the **Menu MAIN**, the machine must be **ON** and the **door open**.

By pressing repeatedly for **long time** the **START** button, you **move trough** the **parameters**.


Once the desired parameter has been reached, by pressing repeatedly for **short time** the **START** button, the **value** will be **increased**.

Value will increase by releasing the button.

To exit the menu, switch the machine **OFF**.

Parameter	Lamp	Display	Unit
Wash Temperature	WASH		°C
Rinse Temperature	RINS		°C
Detergent Setting		dt	seconds
Rinse aid Setting		bl	seconds

Menu MAIN: Tank temperature adjustment

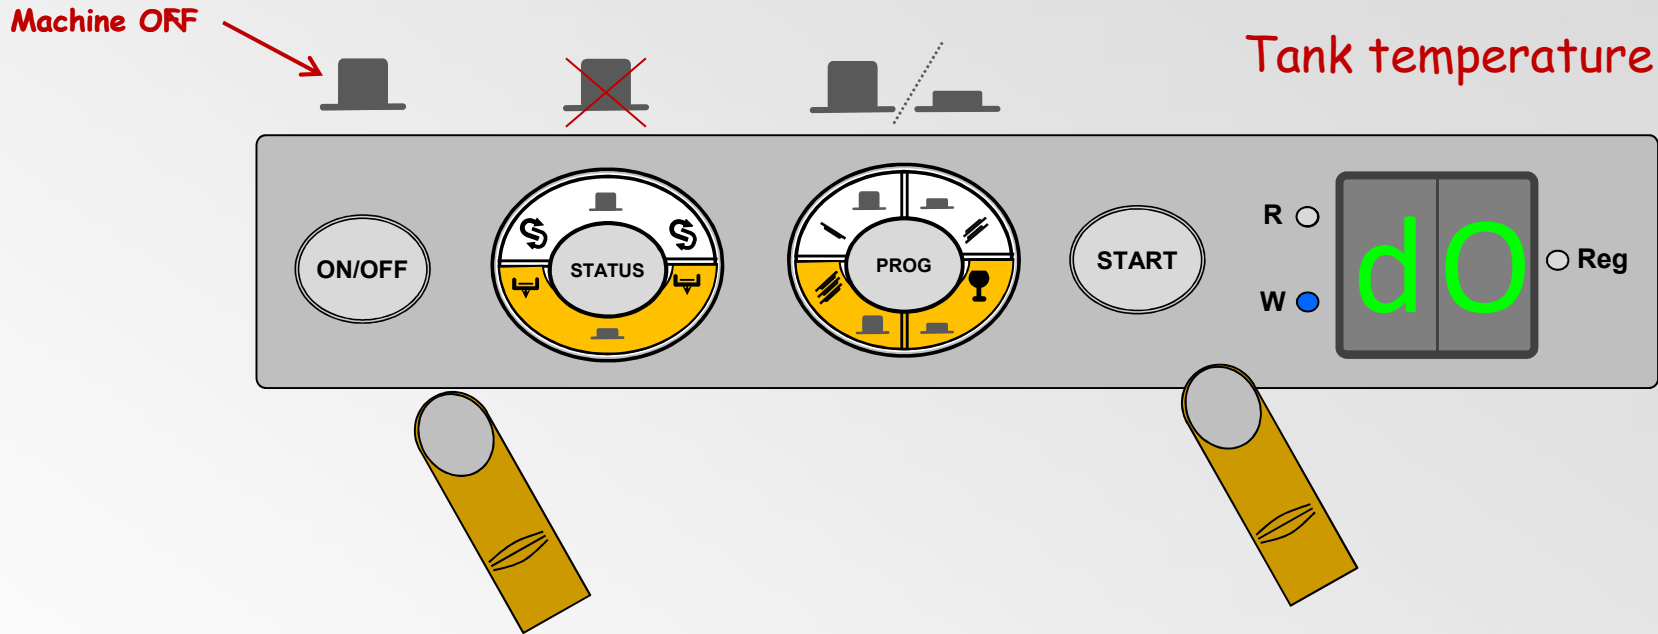

To adjust the **TANK** temperature, the machine must be **ON** and the door open.


Select which program you want to set the tank temperature, by choosing Long/Short cycle with the **PROG** button.

Press for **long time** the **START** button, until the Wash lamp lights and the display flashes, showing the set temperature.

To increase the temperature, press repeatedly for **short time** the **START** button. The display will show the set temperature.

To exit the menu, switch **OFF** the machine by pushing the **ON/OFF** button.

Menu MAIN: Boiler temperature adjustment

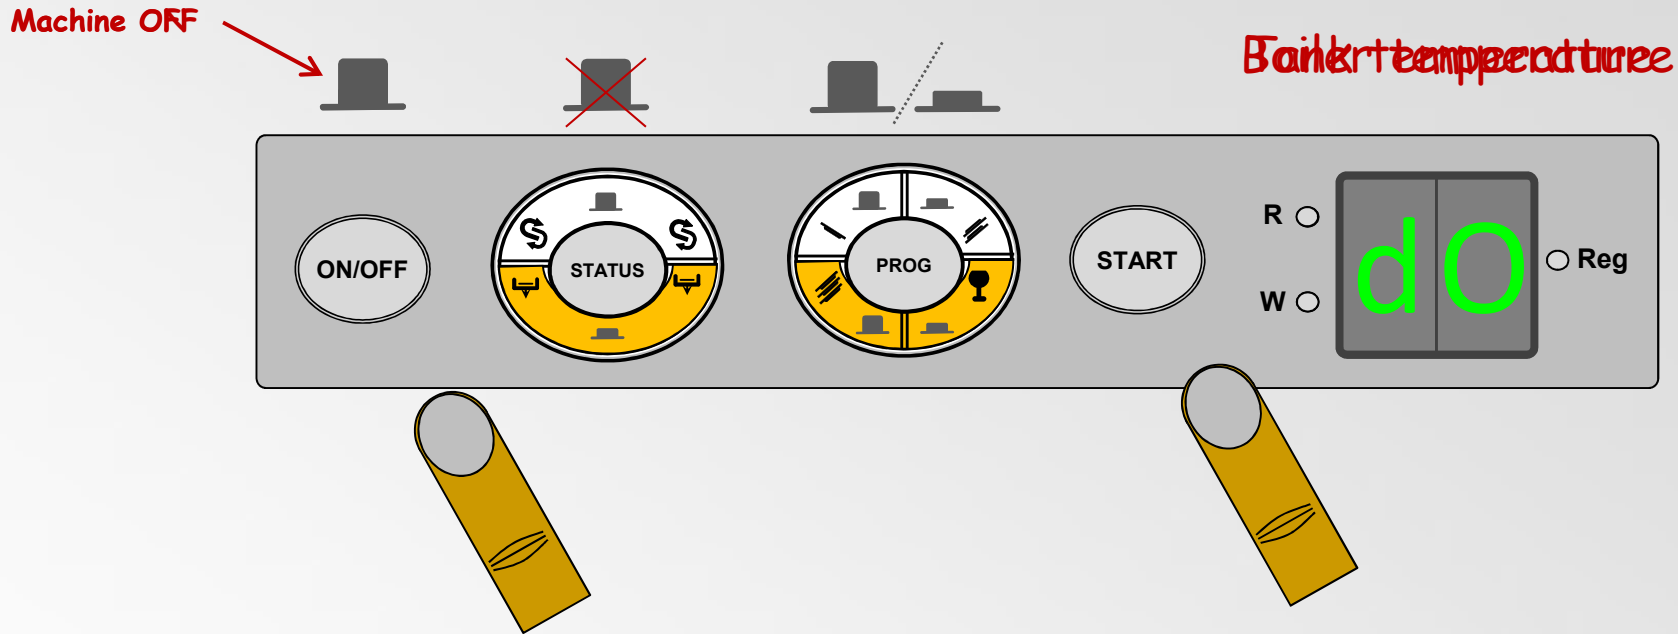

To adjust the **BOILER** temperature, the machine must be ON and the door open.

Select which program you want to set the tank temperature, by choosing Long/Short cycle with the PROG button.

Press **2** times for **long time** the START button, until the Rinse lamp lights and the display flashes, showing the set temperature.

To increase the temperature, press repeatedly for **short time** the START button. The display will show the set temperature.

To exit the menu, switch OFF the machine by pushing the ON/OFF button.

